

**REF 0795**

UNITS- 1

Rx Only




BUBBLE HUMIDIFIER HIGH FLOW  
HUMECTADOR TIPO BURBUJA ALTO FLUJO  
HUMIDIFICADOR DE BOLHAS FLUXO ELEVADO  
UMIDIFICATORE A BOLLE ALTO FLUSSO  
HUMIDIFICATEUR A MICROBULLES ÉCOULEMENT ÉLEVÉ  
PERLANFEUCHTER HOGE STROOM



- Intended Use: Humidify inspiratory gases at flow rates between 6 to 15 LPM.
1. Fill the humidifier jar to the desired level between the maximum and minimum fill line.
  2. Attach the humidifier lid to the jar and ensure proper threading and a tight seal.
  3. Attach the wing nut on the humidifier to the gas source
  4. Test the humidifier for leaks by setting the gas flow to a minimum of 3 LPM and occlude the humidifier outlet. The pressure relief valve will activate. Should the pressure relief valve not activate, ensure the humidifier jar is properly sealed to the humidifier lid. Ensure the wing nut is securely tightened to the gas supply device.
  5. Connect the gas supply to the humidifier outlet. Ensure that all connections are tight.
  6. Set the gas supply to the prescribed flow rate.

**Warning:** If the fill level of the humidifier is above the maximum fill line water may enter the gas supply tubing. This device is equipped with a pressure relief valve that will activate from release of air to a whistling sound when flow is obstructed. If this occurs, check the downstream supply tubing and attached devices

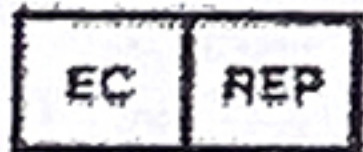

MT Promedt Consulting GmbH  
Altenhofstr. 80  
66386 St. Ingbert, Germany

**Westmed**   
5580 S. Nogales Highway  
Tucson, Arizona 85706 USA  
Phone: 800-975-7987  
Fax: 520-294-6061  
www.westmedinc.com

Assembled in Mexico  
LABEL PN 75092, Rev. 04

**LOT 090820T07**



(01)00709078003158



(10)090820T07